
GENERAL PIPING GUIDELINE: One Conquest® or Power VTX® Water Heater and One Storage Tank

Refer to Installation manual for full details.

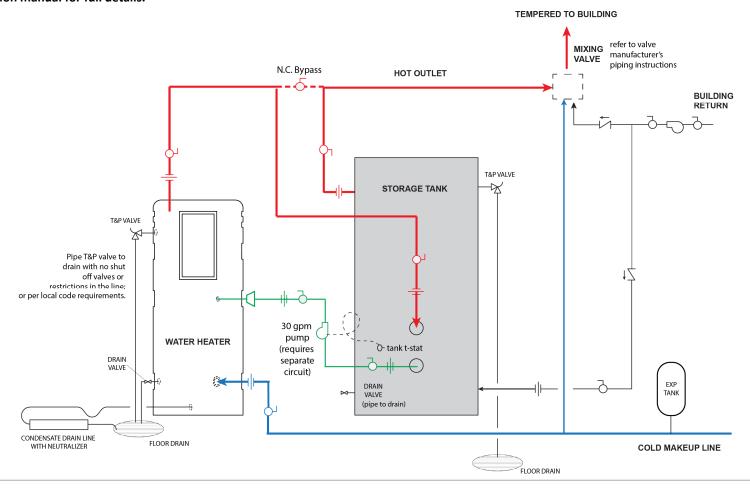

NOTES:

- 1. Do not exceed 160°F stored water temperature in the sidearm tank.
- 2. **Circulating pump requires a separate electrical circuit wired through the tank thermostat.** Tank-mounted thermostat energizes pump on a call for heat. Heater runs independently on its own set point. Pump de-energizes when tank temperature is restored.
- 3. Bypass piping allows heater to continue operation with the storage tank removed from the system.
- 4. During initial startup of the heater and tank, the heater may cycle occasionally.

